




## Guillotine Closure Installation Instructions

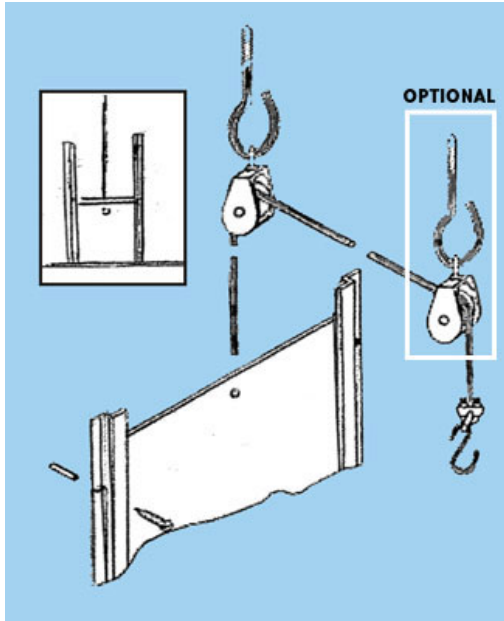

### **Step 1**

Place panel against wall as a template. Install each channel so the panel slides in its grooved track.

### **Step 2**

Drill hole or install a eye hook in panel. Install two pulleys to ceiling and attach a cable/rope to the 3/8" polypropylene panel.

### **Step 3**

Slide polypropylene panel in channels as needed.

### **Parts Suggestion:**

- 5/32" vinyl-coated clothesline
- 1" pulley
- 2" ceiling hook
- 1/8" cable clamp
- S-hood

[Print This!](#)

Categories : [Instructions](#)