




Guillotine Closure Installation Instructions

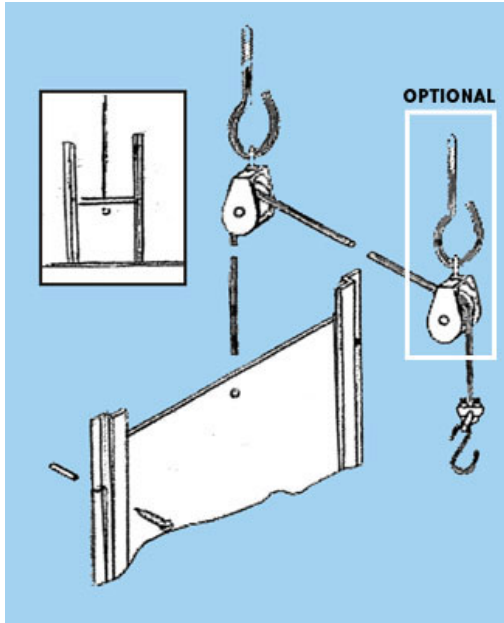

Step 1

Place panel against wall as a template. Install each channel so the panel slides in its grooved track.

Step 2

Drill hole or install an eye hook in panel. Install two pulleys to ceiling and attach a cable/rope to the 3/8" polypropylene panel.

Step 3

Slide polypropylene panel in channels as needed.

Parts Suggestion:

- 5/32" vinyl-coated clothesline
- 1" pulley
- 2" ceiling hook
- 1/8" cable clamp
- S-hood