


Guillotine Closure Installation Instructions

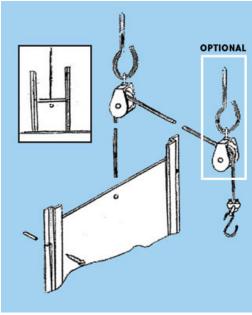

Place panel against wall as a template. Install each channel so the panel slides in its grooved track.

Drill hole or install a eye hook in panel. Install two pulleys to ceiling and attach a cable/rope to the 3/8" polypropylene panel.

Slide polypropylene panel in channels as needed.

Parts Suggestion:

- 5/32" vinyl-coated clothesline
- 1" pulley2" ceiling hook
- 1/8" cable clamp
- S-hood

Step 4

If you purchased the Cable/Pulley Hardware Kit:

- * Drill eye screw into top of panel (centered)
- * Loop cable through eyelet
- * Use u-bolt to clamp cable to eyescrew
- * Screw hook screws into ceiling
- * Run cable through pulleys
- * U-bolt carabiner to end of cable (correct length)



1350 Chester Industrial Pkwy Avon, OH. 44011 gundoghousedoor@gmail.com 1-888-442-2214